



Technical Support  
1.877.7MaxTow  
TechSupport@MaxTow.com  
Mon thru Fri 9am to 6pm EST



## Transmission / Oil Pan Sensor Adapter or Drain Plug Kit



1. Raise and support your vehicle.
2. Drain the fluid from either the transmission or oil pan depending on your application.
3. Remove the pan from the vehicle and clean out using a solvent. Clean all sealing surfaces.
4. Inspect and measure to ensure that there is enough clearance on the inside of the pan to clear the bulk head fitting.
5. Please make sure that the location is on a flat portion of the pan and ensure that there will also be enough clearance on the outside of the pan for the sensor to clear.
6. Mark and drill the location using a 1/2" drill bit.
7. Deburr and clean the drilled area for the bulkhead fitting to seal.
8. Slide the fitting inward from the outside and place the supplied gasket and nut on the outside.
9. Using (2) 19mm wrenches tighten the fitting, making sure not to distort the gasket.
10. Install a new gasket on the pan and reinstall according to manufacturer specifications.
11. Thread in and tighten your temperature sensor using a 14mm wrench. Make sure to use Teflon tape on the threads.
  - You can wrap Teflon tape around the supplied plug and tighten with an 11mm wrench to utilize it as a drain plug.
12. Route the temperature sensor harness through an opening in the firewall and secure the hose with zip ties.
13. Refill with fluid and check for leaks.
14. Lower the vehicle.

All MaxTow Products are subject to the MaxTow Limited Warranty. Please visit <https://www.maxtow.com/warranty-policies> to review complete Warranty, Terms, and Conditions.